


**/// MARTEC®**

**Primo**

**Series**

**48" CEILING FAN  
INSTRUCTION BOOK**

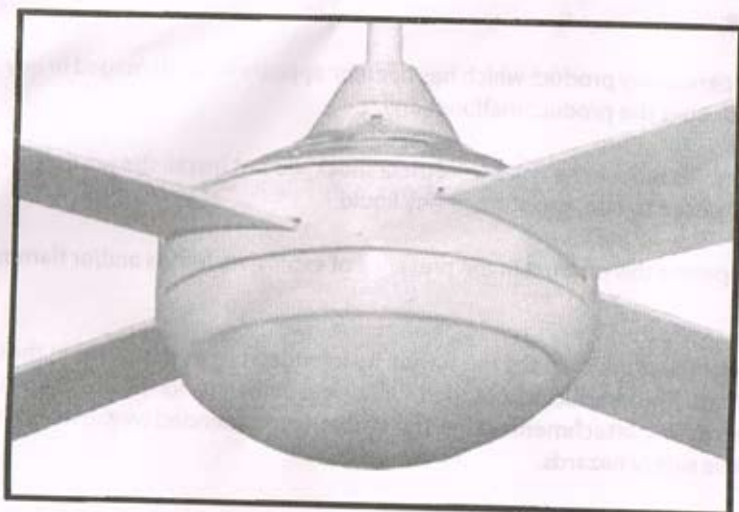

**MODEL: FSP1244 SERIES  
FSP124 SERIES**

Thank you for purchasing your Four Seasons Primo Series product. Please read all instructions carefully before assembly and use.

### Important Safeguards

**READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING THE PRODUCT. KEEP THE INSTRUCTIONS HANDY FOR FUTURE REFERENCE.**

**Important:** Always operate the product from a power source of the same Voltage, Frequency and rating as on the product Identification Plate.

**Important:** The fan is to be installed so that the blades are more than 2.1 metres above the floor.

Avoid contacting moving parts, Keep hands, hair, clothing well away from the product while it is in operation.

This appliance is not intended for use by young children or infirm persons unless they are adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Do not operate any product which has been/or appears to be damaged in any manner or alter the product malfunctions.

**CAUTION:** To reduce the risk of electrical shock, do not install the product where it can be exposed to rain, moisture or any liquid.

Do not operate this product in the presence of explosive, fumes and/or flammable liquid.

Do not use the product to the other than its intended use as described in these instructions. This product is intended for normal domestic household use only. The use of accessory attachments other than those recommended by the manufacturer may cause safety hazards.

## **SAFETY**

Installation of fans must follow S.A.A standards and meet local Authority regulations. A fully qualified and licensed electrician lawfully **MUST** carry out installation.

Means for disconnection must be incorporated in the fixed wiring in accordance with wiring rules

Fan and light **MUST** be earthed. Bracket **MUST** be firmly attached to a solid structure i.e. concrete ceiling, steel structure or timber frame etc. and **MUST** be nailed between beams if timber option is required.

Only install the wall controller kit that comes supplied by Martec Pty Ltd within package. **DO NOT** control operation of fan or light with any other wall controller than what has been approved by Martec Pty Ltd and supplied within this package, as this will void warranty.

## **WARNING**

Only approved Martec Pty Ltd wall controllers should be used for the operation of our fans. The use of unauthorized controllers will void warranty. **DO NOT** mix blades from one fan to another. All blades must be replaced if damaged.

## **HOW TO ASSEMBLE**

Secure the hanger bracket to ceiling beam or a suitable piece of timber inserted between the ceiling beams. Martec Pty Ltd recommends bracket be attached with (2) long screws as supplied within the package (see fig.1)

**NOTE:** Martec Pty Ltd assumes that installation of this ceiling fan is carried out as per the instruction manual i.e. mounted to a solid timber structure.

It is the purchasers responsibility to ensure that the installing electrician has carried out the installation of this ceiling fan as per the instruction manual. Should any noise emanate from this ceiling fan, it is the purchasers responsibility to have their electrician check the installation of the fan. Steel beams, grid ceiling and flexible surfaces will not absorb vibration and may cause some audible noise due to vibration. **THIS IS NOT A FAULT AND IS NOT COVERED UNDER WARRANTY.**

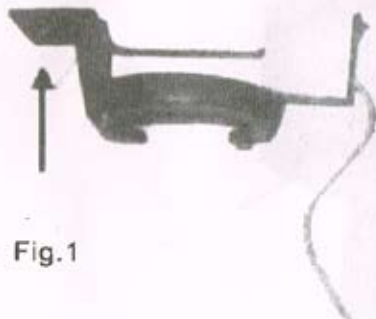


Fig.1

Place fan into hanger bracket and Align Ball Joint Slot with hanger bracket as illustrated (see fig.2)

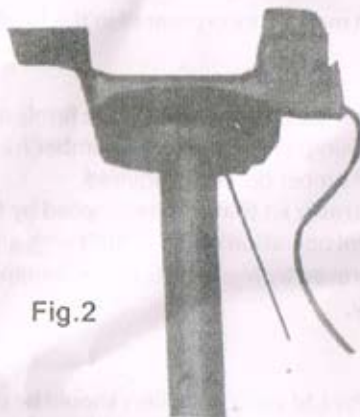


Fig.2

After wiring is completed, attach the canopy (WARNING: The star washer must remain in place and that these connection screws must be securely fixed. See photo below) to the hanger bracket by pushing upwards and twisting anti-clockwise. Locate screws in keyholes and tighten (see fig.3)




Fig.3

## HOW TO INSTALL BLADES

Remove the two screws from the covering plate of blade-fixing hole (see fig.4)  
Insert blades one at a time through four slots around the canopy and secure with three screws for each blade through the top opening. Repeat this procedure for all blades (see fig.4)

Replace the cover plate and secure with two screws once all four blades have been firmly fitted.

Please ensure that the blades do not get bent during the installation process while the fan may be on the ground, as this will affect the performance and balance of the fan and this is NOT covered under warranty.

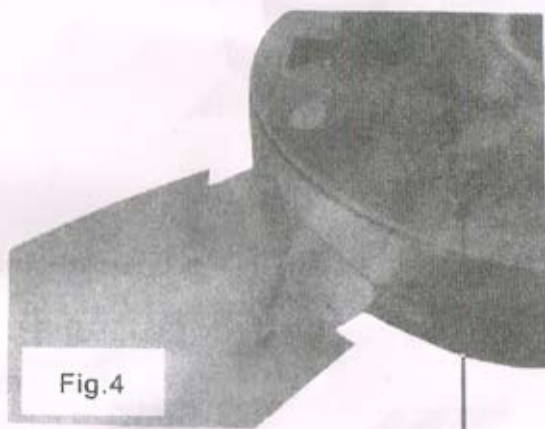

## USE IN ALL SEASONS

Always ensure that fan is set to "OFF" and blades are still prior to changing direction of blades.

Reverse switch on fan should ideally be set on "FORWARD" (left position) during warmer seasons to move blades in an anticlockwise direction & "REVERSE" (right position) during our cooler seasons to make the fan rotate in a clockwise direction (see fig.5)



Fig.5

## IF THE FAN IS WITH LIGHT MODEL(FSP1244x)

### HOW TO REMOVE SHADE FOR INSTALLING LIGHT BULBS



Fig.6


Remove the lamp shade carefully as shown in the fig.6 Turn anticlockwise to remove and clockwise to tighten the lampshade.



Fig.7

Suggest to use two energy save spiral bulbs to be approximately 100mm x52mm in dimension with 15W/each (max) . Insert the bulbs in the holder (see fig.7).

# WIRING INSTRUCTIONS

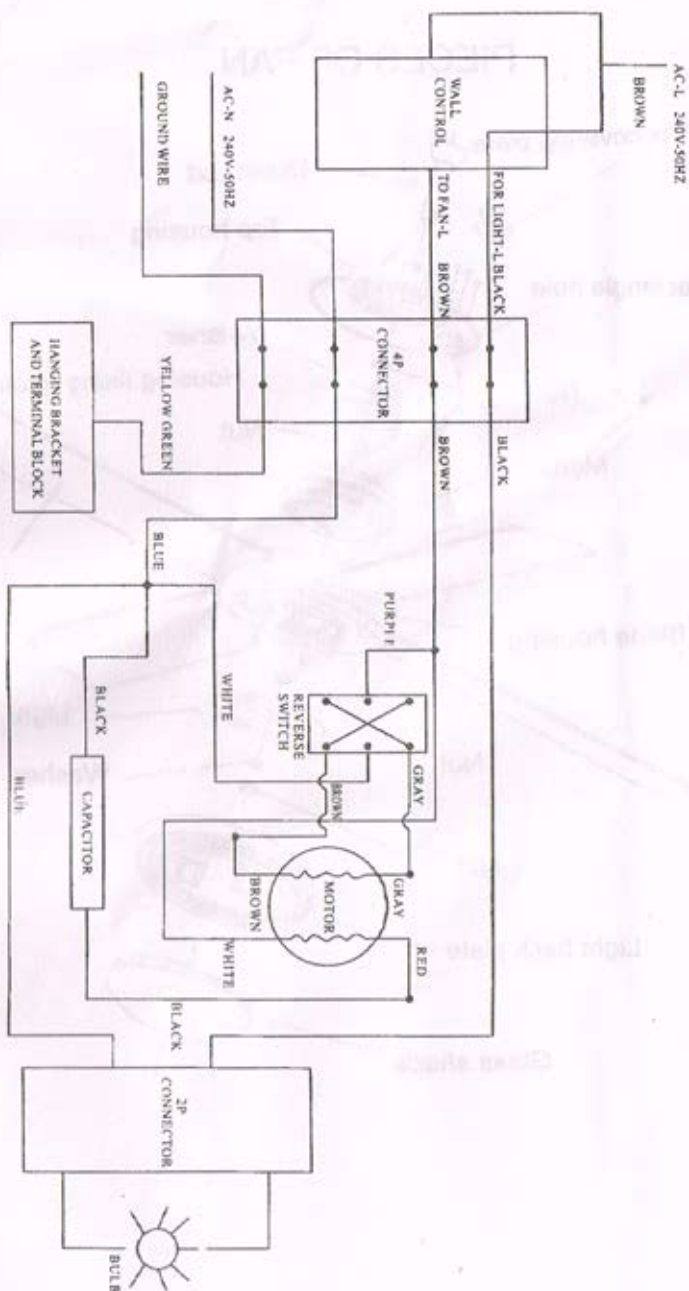

# EXPLODED DIAGRAM

## PIECES OF FAN

