

MPAPP Installation Guide

WARNING

Installation **MUST** carry out by a qualified and licensed electrician.

IMPORTANT REMINDER

1. The supply to the remote-control receiver must be connected through a mains switch, i.e. existing wall switch, to isolate the power.
2. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
3. Install receiver into the ceiling fan canopy of the fan to ensure proper protection (Do not install in ceiling cavity as this will void warranty).
4. This unit is to be used for the control of a ceiling fan with a AC230/240V 50Hz power supply only.
5. Do not install in damp locations or immerse into water (For indoor use only).
6. Do not pull on or cut leads shorter.
7. Do not drop or bump the unit.
8. Please ensure plugs are in the correct position i.e. AC power input to the AC power and to the fan output of the fan. If in the incorrect position, receiver will be damaged, and will not be covered under warranty.
9. **PLEASE NOTE:** The battery will weaken with age and should be replaced regularly before leaking takes place as this will damage the transmitter. Dispose of used battery properly, keep the battery out of reach of children. Leaking batteries are not covered under warranty.
10. **CAUTION:** To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.


INSTALLATION INSTRUCTIONS

Incorrect wire connection will damage the receiver.

Ensure main power (240V) is turned off when installing the receiver as a voltage surge may blow the circuit board.

Insert the receiver into the drop rod hanging bracket and use the canopy to cover the receiver and bracket.


NB: Ensure the wires are tucked away to avoid canopy rupturing the wires and causing a short circuit.

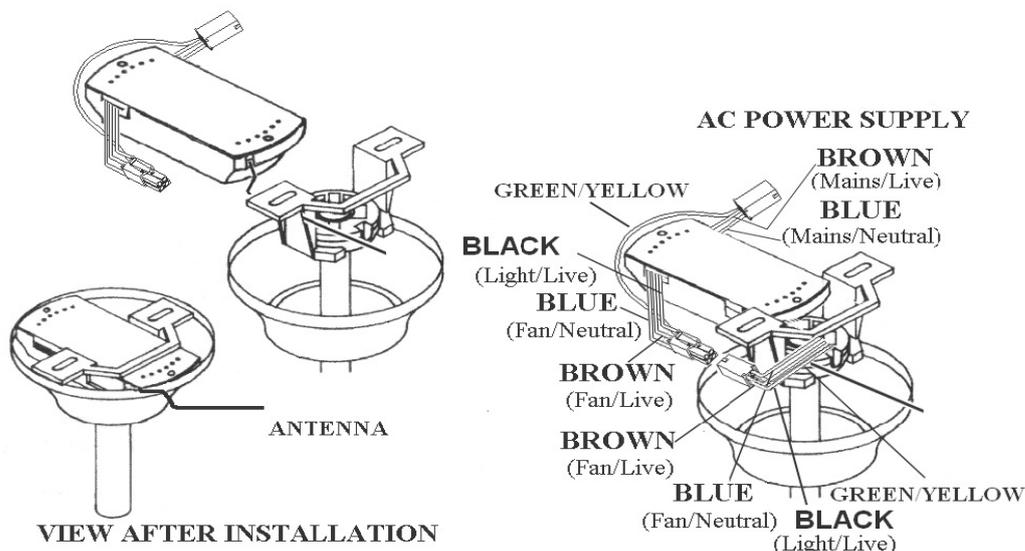

WARNING Installation **MUST** carry out by a qualified and licensed electrician.

PROGRAMMING

The Hand Held Remote Control System is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.

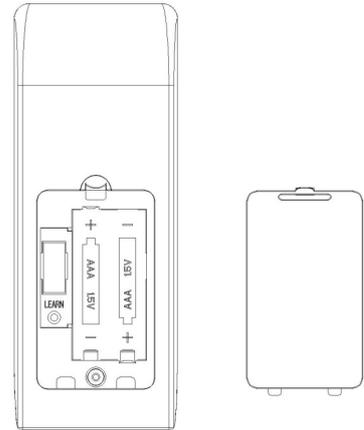

- 01 Install the AAA 1.5V*2 batteries. Within 30 seconds of turning the Receivers AC power ON. Press the transmitter's "LEARN" key.
- 02 Hold the "LEARN" key for over 2 seconds, once the receiver has detected the frequency, Light will flash 2 times which indicates that learning process finished.

NB: The transmitter can be programmed to one or more receivers, so during the programming process, please refrain from attempting to program multiple receivers at the same time. Please ensure power is switched off for all/any additional receivers that are installed in the same premises when wanting to individually pair a desired transmitter to a particular receiver. Failure to ensure power is off for all other receivers may result in the transmitter being paired to all receivers instead.

FUNCTIONS OF TRANSMITTER

HIGH - Turn on the fan at high speed

MED - Turn on the fan at medium speed

LOW - Turn on the fan at low speed

OFF - Turn off the ceiling fan.

LIGHT ON/OFF Press and release immediately to turn on or off the light (if the light is step dim enabled the light will drop one level). **1H TIMER**- Ceiling fan will turn off after 1 hour automatically.


2H TIMER- Ceiling fan will turn off after 2 hours automatically.

4H TIMER- Ceiling fan will turn off after 4 hours automatically.

8H TIMER- Ceiling fan will turn off after 8 hours automatically.

LIGHT- Press light button "on" and "off" repeatedly to operate the light function of your ceiling fan lighting (if applicable).

TRANSMITTER

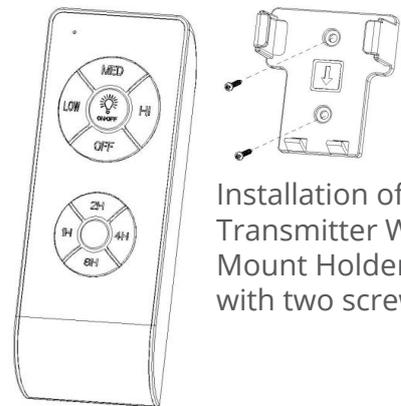

Installation of Transmitter Wall Mount Holder with two screws.

Martec OneTouch App available from the App Store and Google Play .



Martec OneTouch
FREE DOWNLOAD



The OneTouch app operates seamlessly with handheld remote transmitter to enable control of multiple compatible Martec Ceiling Fans with advanced timer function and security settings.