

## CEILING FAN REMOTE CONTROLLER OPERATION AND INSTALLATION INSTRUCTIONS

### IMPORTANT

Please keep this instruction information on how to operate your remote.

 
### IMPORTANT POINTS TO REMEMBER:

- Read and save these instructions.
- Please note that all fixed wiring appliances should be installed by a qualified electrician.
- The supply to the remote control receiver should be connected through a mains switch, i.e. existing wall switch.
- Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
- Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
- This unit is to be used for the control of ceiling fan and in a AC230/240V 50Hz power supply only.
- Do not install in damp locations or immerse into water. (For indoor use only.)
- Do not pull on or cut electrical cord shorter.
- Please dispose of used batteries properly and keep batteries out of reach of children.


### INSTALLATION INSTRUCTIONS

1. Ceiling fan must be set at HIGH speed and light kit (If fitted with a light kit ) at "ON" position by switching the switch to on position after installation.
2. Once the connection has been made, the receiver inserts into the drop rod hanging bracket. The canopy comes up to cover the receiver and bracket.
3. Please make sure the antenna wire has been safely folded inside the canopy cover before final assembly.

#### RECIEVER INSTALLATION DIAGRAM:

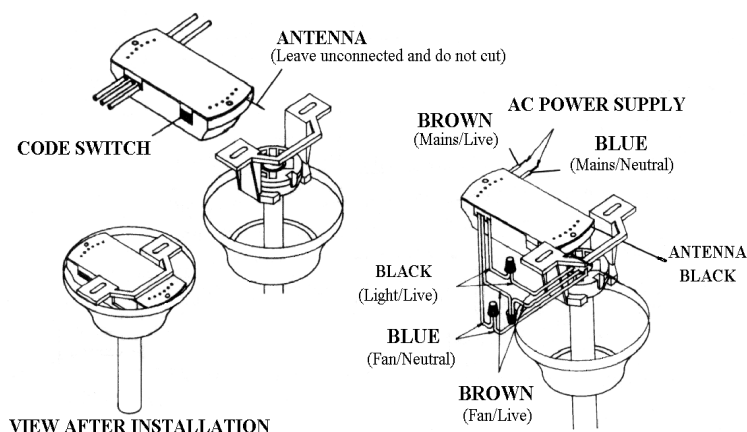


#### RECEIVER WIRING DIAGRAM :

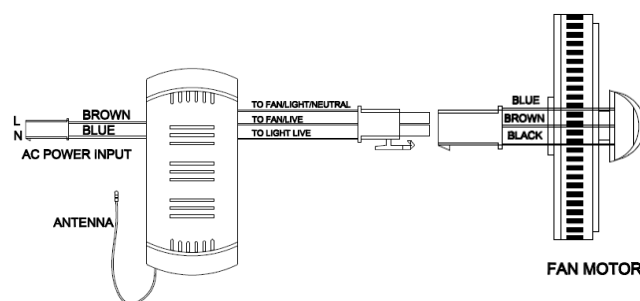 

## CODE SWITCH

 1. **CODE SWITCH:** Codes are set by pushing dip switches up or down. It is imperative that the code used for both transmitter and receiver is exactly the same; otherwise remote controller will not work. Please note the code switch will enable you to operate a second remote controller independently. For example, if you have two ceiling fans with 2 remote control units, set 2 different codes for each set of transmitter/receivers. This means you can operate each ceiling fan independently.
2. Your remote control is ready for use after batteries are installed. ( 2 x1.5V/AAA Batteries Included)

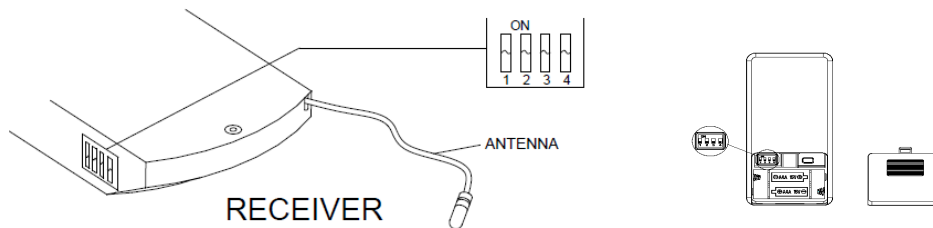

## FUNCTIONS OF TRANSMITTER



**FAN/OFF** : Turn off the ceiling fan.



**H** : Turn on the fan at high speed



**M** : Turn on the fan at medium speed



**L** : Turn on the fan at low speed

 


**TIMER (1H to 8H)**: When fan turned on, press this key for set timer 1 to 8 hrs. for turning off. For example, set 1hr. that the ceiling fan will turn off after 1 hour automatically.



**LIGHT ON/OFF** : Press and release immediately to turn on or off the light


## TRANSMITTER

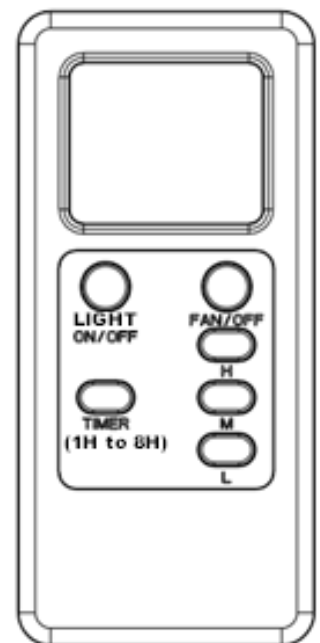

**TO BE INSTALLED BY A  
LICENSED ELECTRICIAN**



 Installation of  
transmitter wall mount  
holder with two screws.

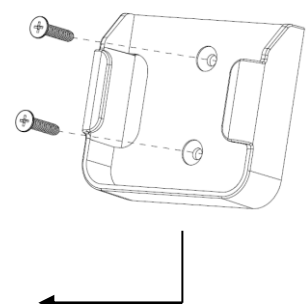

## MARTEC PTY LTD: 1 YEAR IN HOME WARRANTY STATEMENT\*

### WARRANTY STATEMENT:

Martec Pty Ltd warrants this product for a period of 1 years "In Home" warranty from the original date of purchase for residential situations:

**IMPORTANT NOTICE: MARTEC PTY LTD WARRANTS THIS PRODUCT FOR 1 YEARS WITH "IN HOME" WARRANTY. MARTEC PTY LTD ONLY WARRANTS THE MARTEC PRODUCT AGAINST FAULTY WORKMANSHIP AND SUBJECT TO THE CONDITIONS AND PROVISIONS SET OUT BELOW:**

Martec Australia warrants this product against defects in manufacture and workmanship for a period of 1 year from date of purchase. For products used in non-domestic or commercial applications, Martec Australia warrants this product for a period of 3 months from date of purchase. This in -home warranty is only valid for products installed by a qualified electrical contractor and operated within the guidelines specified by Martec Australia, and within the correct operating voltage range as stated on the products rating label.

Warranty does not include damage or loss arising from incorrect installation , operation or maintenance of this product, damage caused through modification, incorrect installation , and service by unqualified or unauthorised personnel or lack of regular maintenance and cleaning . Proof of installation by qualified personnel maybe required , e.g. Electrical Safety Certificate . Proof of purchase must be supplied with all warranty claims.

This warranty is provided in addition to any other rights and remedies of the customer under any law. In applications not intended for household , personal or domestic use, liability is limited to replacement or reimbursement of product only.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage . You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any claim under this warranty must be within 1 year of the date of this purchase of the product. To claim under the warranty , take the product ( with proof of purchase receipt- invoice ) to the store where you made the purchase or contact Martec Australia at the address below:

Martec Australia Pty Ltd  
6 Austool Place  
Ingleburn NSW  
Phone 02 8778 7500  
Email : sales@martec ltd.com.au