Kingston DC Smart Series Installation Guide

Thanks for choosing our Kingston DC Smart Series ceiling fan.

We strongly recommend that you read this manual carefully before installation.



Models Parameters (Fan Only):

MKDC1240 B 1265mm 4 Blade DC WiFi Ceiling Fan Old Bronze

MKDC124 W 1265mm 4 Blade DC WiFi Ceiling Fan Matt White


Models Parameters (Fan and LED Light):

MKDC12430B 1265mm 4 Blade DC WiFi Ceiling Fan Old Bronze with light


MKDC1243W 1265mm 4 Blade DC WiFi Ceiling Fan Matt White with light

Part List:

Qty 1x Motor assemblyQty 1x Instruction manualQty 1x LED light kit (with light models only)Qty 1x Mounting bracketQty 1x Remote & ReceiverQty 1x Acrylic lampshade(with light models only)Qty 1x Screw kitQty 4x Blade support partQty 1x Bottom plate (no light models only)Qty 4x BladesQty 4x Blade bracket

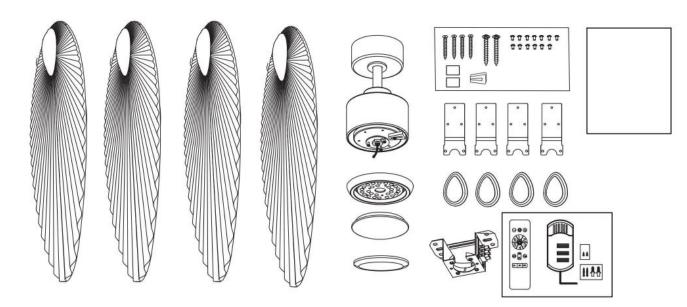

Application

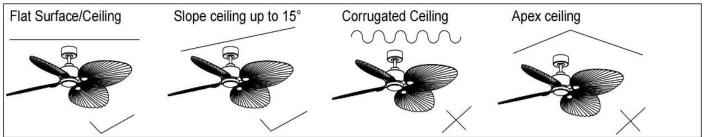



IMPORTANT SAFEGUARDS:

Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- the fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan;
- that the mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons;
- that the fan is to be installed so that the blades are more than 2,1m above the floor.


WARNING: If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.

How to Assemble

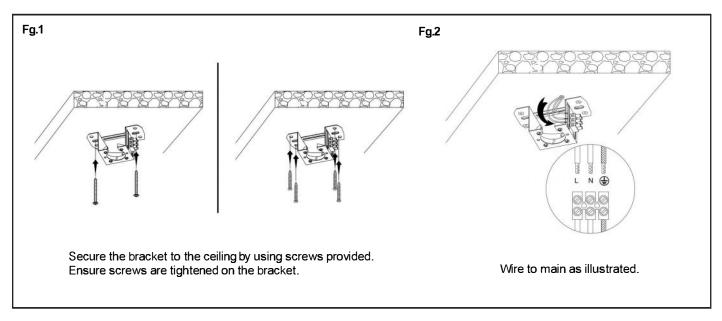




How to Install

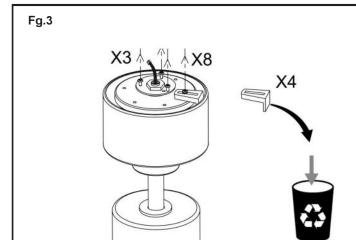


- 1. Remove 11 screws on the motor as illustrated.
- NB: Ensure all screws are carefully put aside.
- 2. Remove 4 plastic inserts on the motor before installing the blades.

How to Install Blades

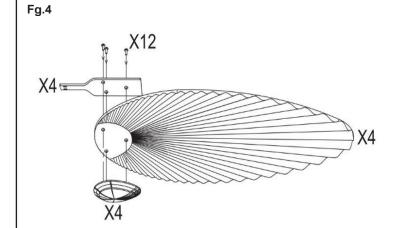

Install the blades as illustrated.

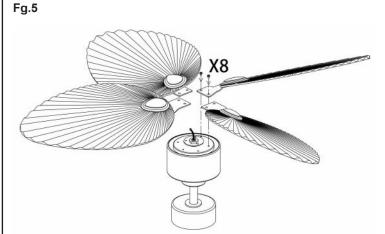


Install the blades to the motor with screws provided. Tighten screws securely. Repeat this procedure until all blades are installed.


NB: Ensure the blades do not get damaged or bent during the installation process while the fan maybe on the ground this will affect the performance and balance of the fan and this is NOT covered under warranty.



How to Install Light Plate

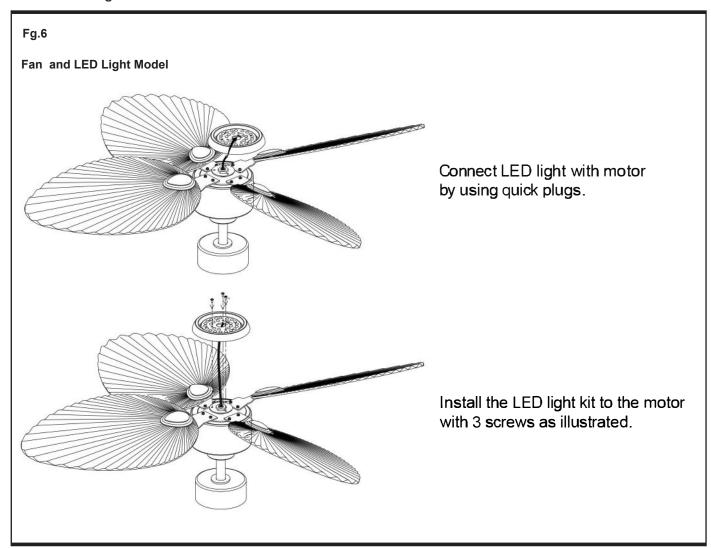

How to Install

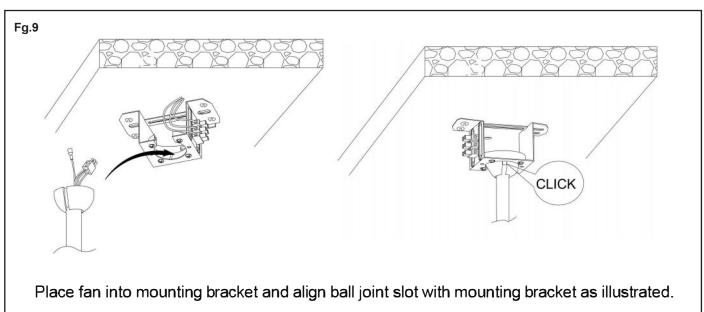





How to Install

Fg.10

Fan Only Model

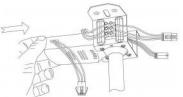


Carefully insert and install the receiver into the mounting bracket.

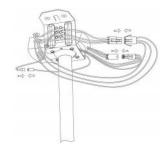


Connect all connectors as illustrated.

Fan and LED Light Model

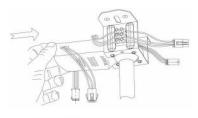

Carefully insert and install the receiver into the mounting bracket.

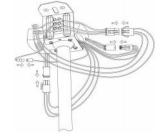

Connect all connectors as illustrated.

Wire up the receiver with quick connectors and insert into the mounting bracket. Make sure the antenna wire has been safely folded inside the canopy cover before final assembly. (DO NOT cut the antenna wire)

Important Reminders


Receiver must be correctly installed in the mounting bracket When the transmitter cannot control the receiver, please check


- i) has sufficient battery in the transmitter
- ii) any existence of similar remote controlled products nearby that cause interference

Replace battery if getting low as this will affect sensitivity of the transmitter Take the battery out from the transmitter when leaving used for a long time to avoid battery leaks Isolation switch MUST be connected in the line

How to Install


Fg.7

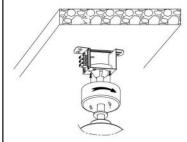

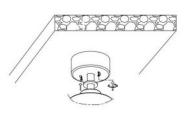

After wiring is completed, attach the canopy to the mounting bracket by pushing upwards and twisting anti clockwise. Tighten screws and ensure canopy is not touching the ball joint.

Fg.8

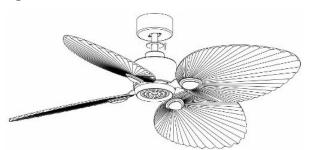


Attach the decorative ring of the fan as illustrated.




How to Install



Fan Only Model

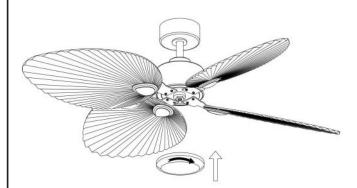

Fan and LED Light Model

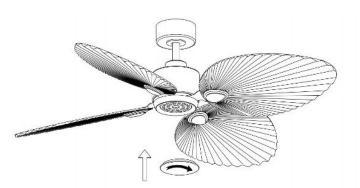


Twist bottom plate on to motor shaft thread.

Hold the diffuser to the bottom of the motor and rotate clockwise until it locks into place.

WOBBLE:


- Ceiling fans are designed to move during operation because they are not generally rigidly mounted
- Movement of a couple of centimetres is acceptable for safe operation.
- Balancing kits included should be used to adjust the balancing when first installed.

Complete

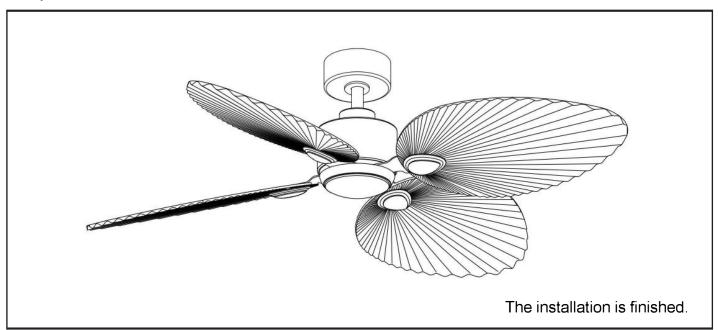



Wire Connections

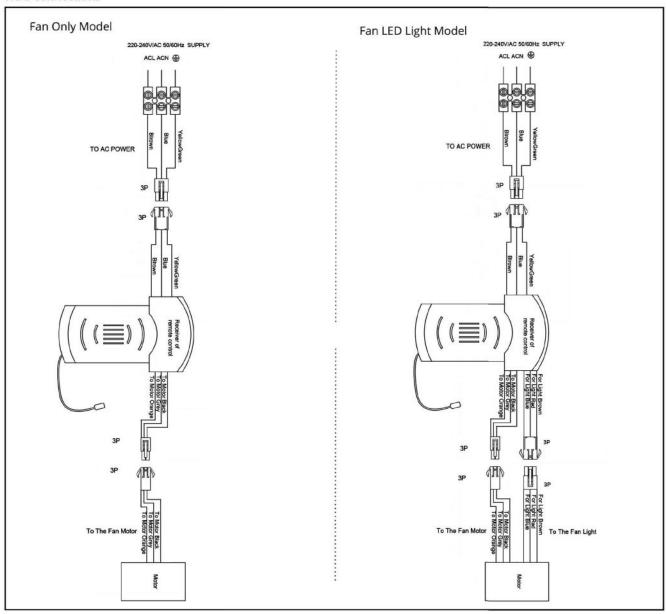

6* Year Warranty

Visit our website for details https://www.martecaustralia.com.au/wp-content/uploads/2023/05/Warranty-Statement_Cooling.pdf

WARNING

- Installation of fans MUST follow SAA standards and meet local authority regulations.
- Installation MUST be carried out by a qualified and licensed electrician.
- Fan and light MUST be earthed.
- Bracket MUST be firmly attached to a flat solid structure or timber frame.
- DO NOT mix blades from one model to another, all blades MUST be replaced if damaged.
- The warranty is VOID if product is not installed according to this installation guide.



Smart Life matching process, please follow the steps:

1.Download the "Smart Life" APP on your smart devices by scanning the QR code below with camera.



- Turn on WiFi and Bluetooth on your smart devices. Ensure it's connected to a 2.4GHZ WiFi.
- 3. Open the APP, follow the steps to register new user account or login existing account.



- 4.Follow instructions in main manual (steps can also be found on the back of the remote) to put the fan into WiFi pairing mode. If the operation is successful, go to step 6. If the fan has previously been paired or you can't get it to work, please go to step 5 to RESET the fan.
- 5.RESET the fan. This step is NOT necessary if the fan has successfully entered WiFi pairing mode in the last step, if not, try to RESET the fan: turn on the fan, power off after 10 seconds, power on again after 15 seconds, long press "Fan Stop" for 5 seconds, if "beep beep" are heard, the reset is successful. If "beep beep" is not heard, the reset is failed, please repeat this step.

6.Once the fan has entered WiFi pairing mode, open the APP again on the smart device. Click "Add Device" in the middle or the "+" on the top right of the screen.




7. The auto scan should begin automatically, and the fan should show up at the top of screen within a few seconds.

Note: If the fan is not showing up, you can add it manually by clicking and navigate to: >Add Manually >Small Home Appliance > Fan





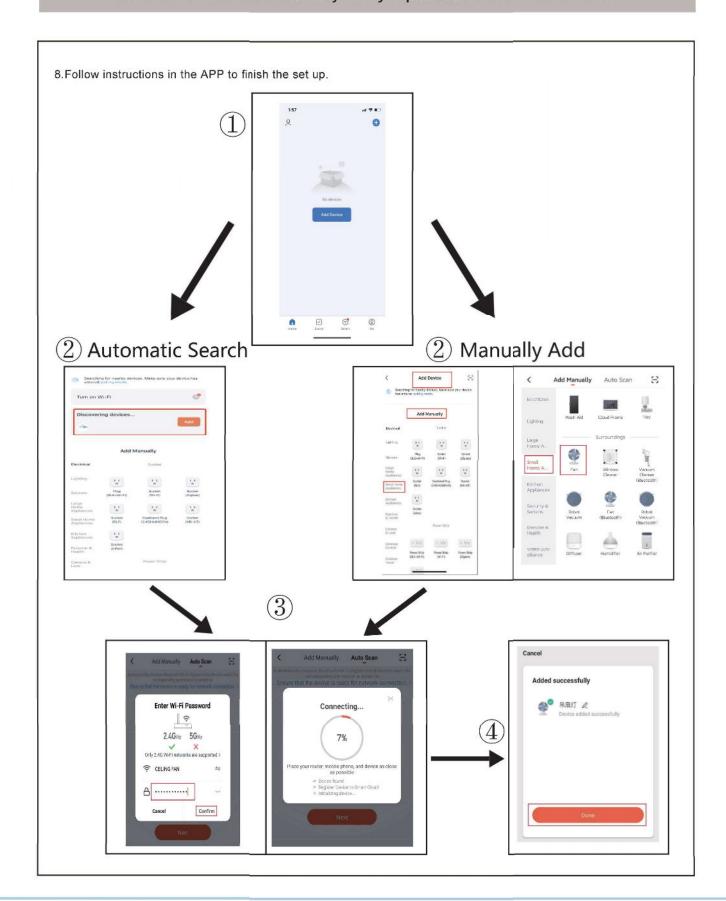



1h 4h 8h

/// MARTEC

WiFi / Remote Control Pairing

Fan only model

Pairing the remote control

- 1. Turn on the ceiling fan.
- Within the first 20 seconds, continue pressing the () button until you hear a "beep" sound. ie. It is paired.

If you don't hear a "beep" sound, repeat step 1 and step 2 again.

Entering WiFi Pairing mode:

- 1.Turn on the power.
- 2.Within the first 20 seconds, press and hold the " button until a "beep" is heard.
- 3.Continue step connect on your smart devices to complete the pairing.

If you don't hear a "beep" sound, repeat the above steps.

FAN OFF (1): to switch off the fan.

SLEEP MODE : Turn on the fan at an extra lower speed to create a general breeze.

SPEED BUTTON: 1 = lowest speed. 6 = highest speed.

NATURAL WIND MODE : designed for the elderly and children. 1-6 speed changes randomly to feel the breeze.

FORWORD AND REVERSAL (): summer/winter reverse mode.

TIMER 1H/4H/8H: preset timer for fan and light to stop automatically. ie. if timer set at 1H and then press 4H, fan will stop at 4H. Setting default to last press.

WIFI BUTTON :Follow the instructions and press and hold for 20 seconds to enter wifi matching mode.

Fan LED Light Model

Pairing the remote control

- 1. Turn on the ceiling fan.
- 2. Within the first 20 seconds, continue pressing the button until you hear a "beep" sound. ie. It is paired.

If you don't hear a "beep" sound, repeat step 1 and step 2 again.



Entering WiFi Pairing mode:

- 1. Turn on the power.
- 2.Within the first 20 seconds, press and hold the " - ∵ button until a 'beep' is heard.
- 3. Continue step connect on your smart devices to complete the pairing.

If you don't hear a "beep" sound, repeat the above steps.

FAN OFF (): to switch off the fan.

SLEEP MODE : Turn on the fan at an extra lower speed to create a general breeze.

SPEED BUTTON: 1 = lowest speed. 6 = highest speed.

NATURAL WIND MODE : designed for the elderly and children. 1-6 speed changes randomly to feel the breeze.

FORWORD AND REVERSAL (): summer/winter reverse mode.

TIMER 1H/4H/8H: preset timer for fan and light to stop automatically. ie. if timer set at 1H and then press 4H, fan will stop at 4H. Setting default to last press.

LIGHT ON/OFF - : to switch off the light.

CCT: warm white (2700K) / netural white (4000K) / cool white (6500K)

LED- LED+ : minus "-" = reduces brightness plus "+"= increases brightness

6* Year Warranty

Visit our website for details



https://www.martecaustralia.com.au/wp-content/uploads/2023/05/Warranty-Statement_Cooling.pdf

WARNING

- · Installation of fans MUST follow SAA standards and meet local authority regulations.
- Installation MUST be carried out by a qualified and licensed electrician.
- Fan and light MUST be earthed.
- · Bracket MUST be firmly attached to a flat solid structure or timber frame.
- DO NOT mix blades from one model to another, all blades MUST be replaced if damaged.
- The warranty is VOID if product is not installed according to this installation guide.

