# ELITE AC Series Installation Guide

Thanks for choosing our Elite AC Series ceiling fan.

We strongly recommend that you read this manual carefully before installation.

## Models Parameters (Fan Only):-

MEF133MM 1220mm 3 Blade Ceiling Fan Matt Black
MEF133WW 1220mm 3 Blade Ceiling Fan Matt White
MEF133WO 1220mm 3 Blade Ceiling Fan Matt White/Oak
MEF133MB 1220mm 3 Blade Ceiling Fan Matt Black/Bamboo
MEF133BB 1220mm 3 Blade Ceiling Fan Brushed Nickel/Bamboo
MEF133OM 1220mm 3 Blade Ceiling Fan Old Bronze/Merbau
MEF133BS 1220mm 3 Blade Ceiling Fan Brushed Nickel/Silver

# Models Parameters (Fan and LED Light):-

MEF1333MM 1220mm 3 Blade Ceiling Fan Matt Black with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Matt White with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Matt White/Oak with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Matt Black/Bamboo with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Brushed Nickel/Bamboo with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Brushed Nickel/Bamboo with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Old Bronze/Merbau with 24W Tricolour LED Light
1220mm 3 Blade Ceiling Fan Brushed Nickel/Silver with 24W Tricolour LED Light


#### Part List:

Qty 1x motor assembly Qty 1x instruction manual Qty 1x screw kit Qty 1x balancing kit

Qty 1x hanging bracket Qty 1x wall control kit Qty 3x blades

#### Application


Flat Surface / Ceiling



Slope Ceiling up to 15°



Corrugated Ceiling




Apex Ceiling



Warranty


## How to Assemble

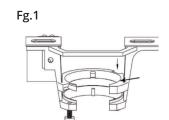

Secure the hanger bracket to ceiling beam or a suitable piece of timber inserted between the ceiling beams using the two long screws supplied with the package. (See Fg.1)

# Fg.2

Place circular shockproof gasket above the hanger bracket. Align the bracket and screw the hanger bracket to the ceiling tightly. (See Fg.2)

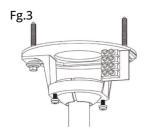

Place fan into hanger bracket and align Ball Joint Slot with hanger bracket as illustrated.(See Fg.3)




After wiring is completed, attach the canopy to the hanger bracket by pushing upwards and twisting anticlockwise. Tighten screws and ensure canopy is not touching the ball joint. (See Fg.4)



## **WARNING** Installation MUST carry out by a qualified and licensed electrician.

## **How to Install Blades**

Fg.5




The screw installed on the upper housing must align at the gap as shown. (See Fg.5)

Remove the screw at the lower housing. Align holes on the blades with holes at the bottom of the motor. Tighten the blade using screws provided. Repeat the same step until all blades are installed.

NB: Ensure the blades do not get damaged or bent during the installation process while the fan maybe on the ground, this will affect the performance and balance of the fan and this is NOT covered under warranty.

#### How to Install / Remove the Cover


Fg.6 Model shown with light

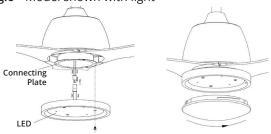

**To install:** Remove the screw from the connecting plate. Plug the wire into the light kit mounting hole. Align the thread with connecting plate before tighten the screw.

To remove: Turn anti-clockwise.

Fg.7 Model shown fan only

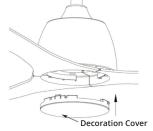


To install: Align face plate with the blade gap

before pressing.

To remove: Turn anti-clockwise.

## **CCT (Colour Changeable Temperature)**

Fg.8

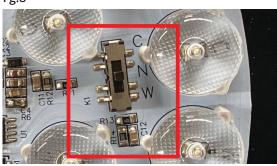

Choose colour temperature by flicking the switch in the LED (See Fg.10)

C = 5000K cool white

N = 4000K neutral white

W = 3000K warm white



# WARNING Installation MUST carry out by a qualified and licensed electrician.

### **Dimming**

on 100% initially.

The Elite ceiling fan has a smart 3 step dimming LED light module which doesn't require a dimmable remote control or a wall dimmer. It only requires a normal on/off remote kit (MPREMS) or a normal light wall switch. (Supplied in remote control kit).

Turn the switch on and the light will turn on. Flick the switch on/off within 1 second and the light output will dim down to approx. 50%. Flick the switch on/off again and the light output will dim down to approximately 15%. The light kit has no memory function, It will turn

## **Instructions and Functions of Transmitter**



Setting the code on transmitter

- 1. Remove battery cover
- 2. Slide code switches to your choice of ON/OFF position
- 3. Install battery (supplied)


Setting code on receiver:-

1. Slide code switches on the receiver in the same position set on the transmitter

NB: Martec Remotes - MPREMS (as illustrated on the left), MPLCDS and MAPP are sold separately.




## **Installing Receiver Remote Control**

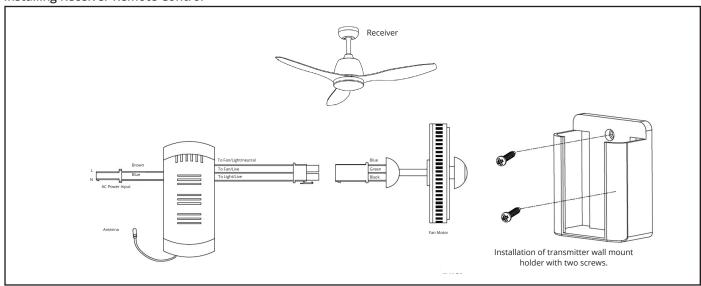



# **WARNING** Installation MUST carry out by a qualified and licensed electrician.

#### Wire Connections

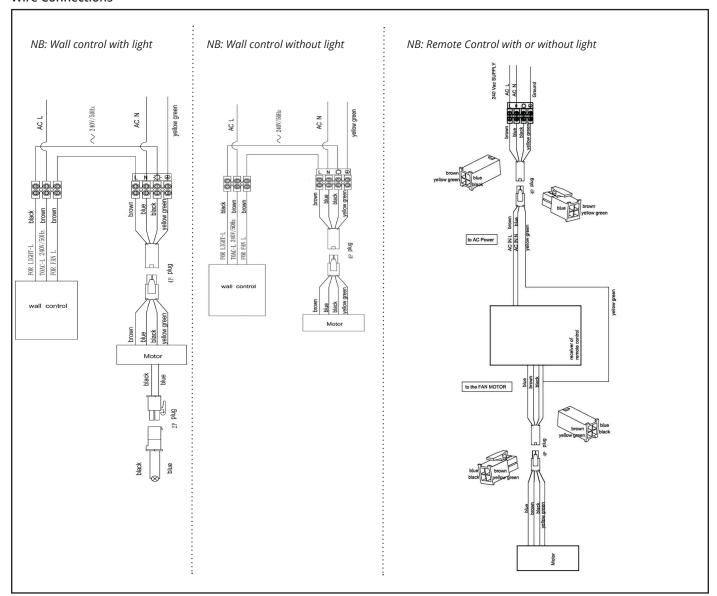

#### 6\* Year Warranty

Visit our website for details https://www.martecaustralia.com.au/warranty-statement/



#### **WARNING**

- $\bullet \quad \text{Installation of fans $\textbf{MUST}$ follow SAA standards and meet local authority regulations.}$
- Installation MUST be carried out by a qualified and licensed electrician.
- Fan and light MUST be earthed.
- Bracket MUST be firmly attached to a flat solid structure or timber frame.
- DO NOT mix blades from one model to another, all blades MUST be replaced if damaged.
- The warranty is **VOID** if product is not installed according to this installation guide.

