




CRUISE SERIES

Ceiling Fan Instruction Book

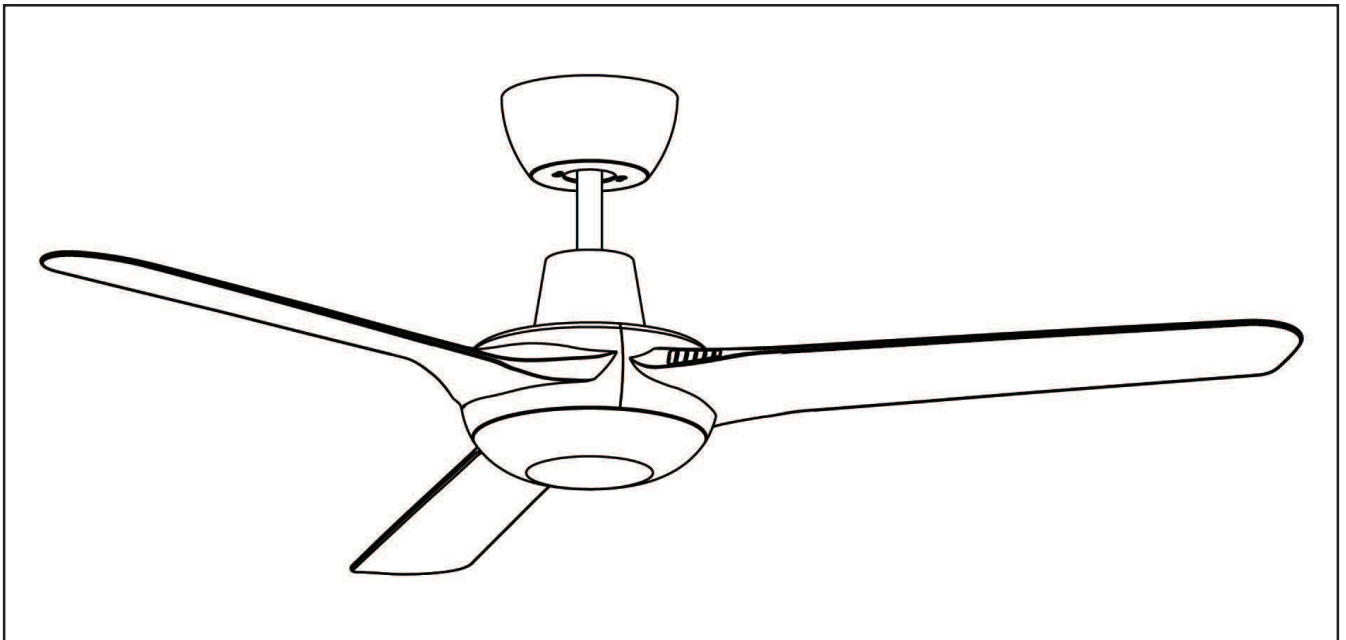

Models: MCF133 MCF143 MCF1333 MCF1433

DESCRIPTION	QUANTITY
Motor assembly	1
Instruction manual	1
Screw kit	1
Balancing kit	1
Hanging bracket	1
Wall control kit	1
Blades	3

Thank you for purchasing your MARTEC CRUISE Series product. Please read all instructions carefully before assembly and use.

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING THE PRODUCT. KEEP THE INSTRUCTIONS HANDY FOR FUTURE REFERENCE.

IMPORTANT

Always operate the product from a power source of the same Voltage, Frequency and rating as on the product Identification Plate.

IMPORTANT

The fan is to be installed so that the blades are more than 2.1 metres above the floor.

Avoid contacting moving parts, keep hands, hair and clothing well away from the product while it is in operation.

A Luminaire (light fitting) included in the fan packaging may only be fitted to this fan.

“This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.”

“Young children should be supervised at all times to ensure that they do not play with the appliance.”

Do not operate any product which has been or appears damaged in any manner or after the product malfunctions.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT INSTALL THE PRODUCT WHERE IT CAN BE EXPOSED TO RAIN, MOISTURE OR ANY LIQUID.

Do not use the product for other than its intended use as described in these instructions. This product is intended for normal domestic household use only. The use of accessory attachments other than those recommended by the manufacturer may cause safety hazards.

SAFETY



The installation of fans must follow S.A.A. standards and meet local Authority regulations. A fully qualified and licensed electrician lawfully MUST carry out installation. Means for disconnection must be incorporated in the fixed wiring in accordance with wiring rules.

Fan and light MUST be earthed. Bracket MUST be firmly attached to a solid structure i.e. concrete ceiling, steel structure or timber frame and additional joist MUST be nailed between beams if the timber option is required. ONLY install the remote controller kit that comes supplied by Martec Pty Ltd within package. DO NOT control operation of fan and light with any other remote control than what was approved by Martec Pty Ltd and supplied within this package, as this will void warranty.





WARNING

Only approved Martec Pty Ltd wall controllers should be used for the operation of our fans. The use of unauthorised controllers will void the warranty. DO NOT mix blades from one fan to another. All blades must be replaced if damaged wall switch included is a single pole switch.



WITHOUT LIGHT

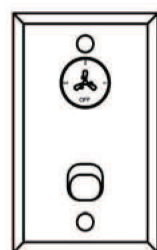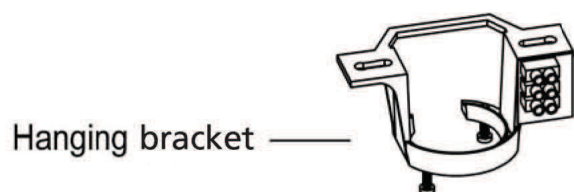


Wall control

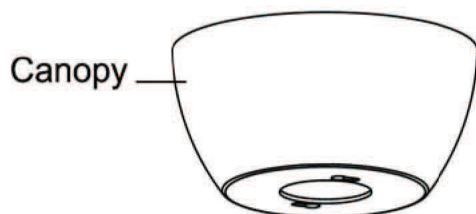

Reverse Switch

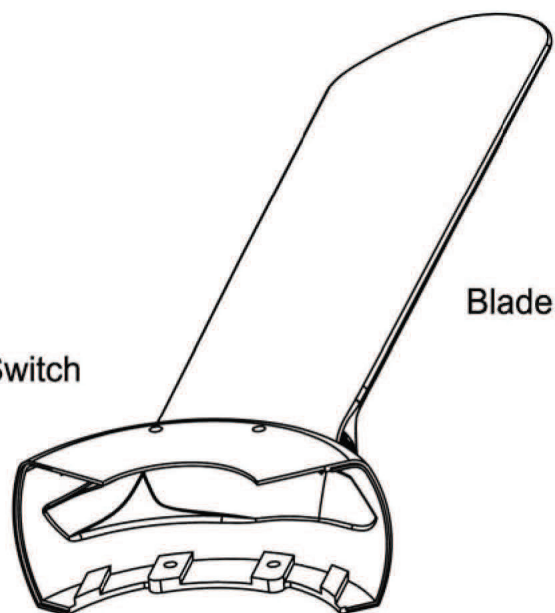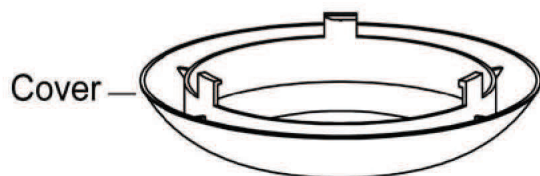

WITH LIGHT

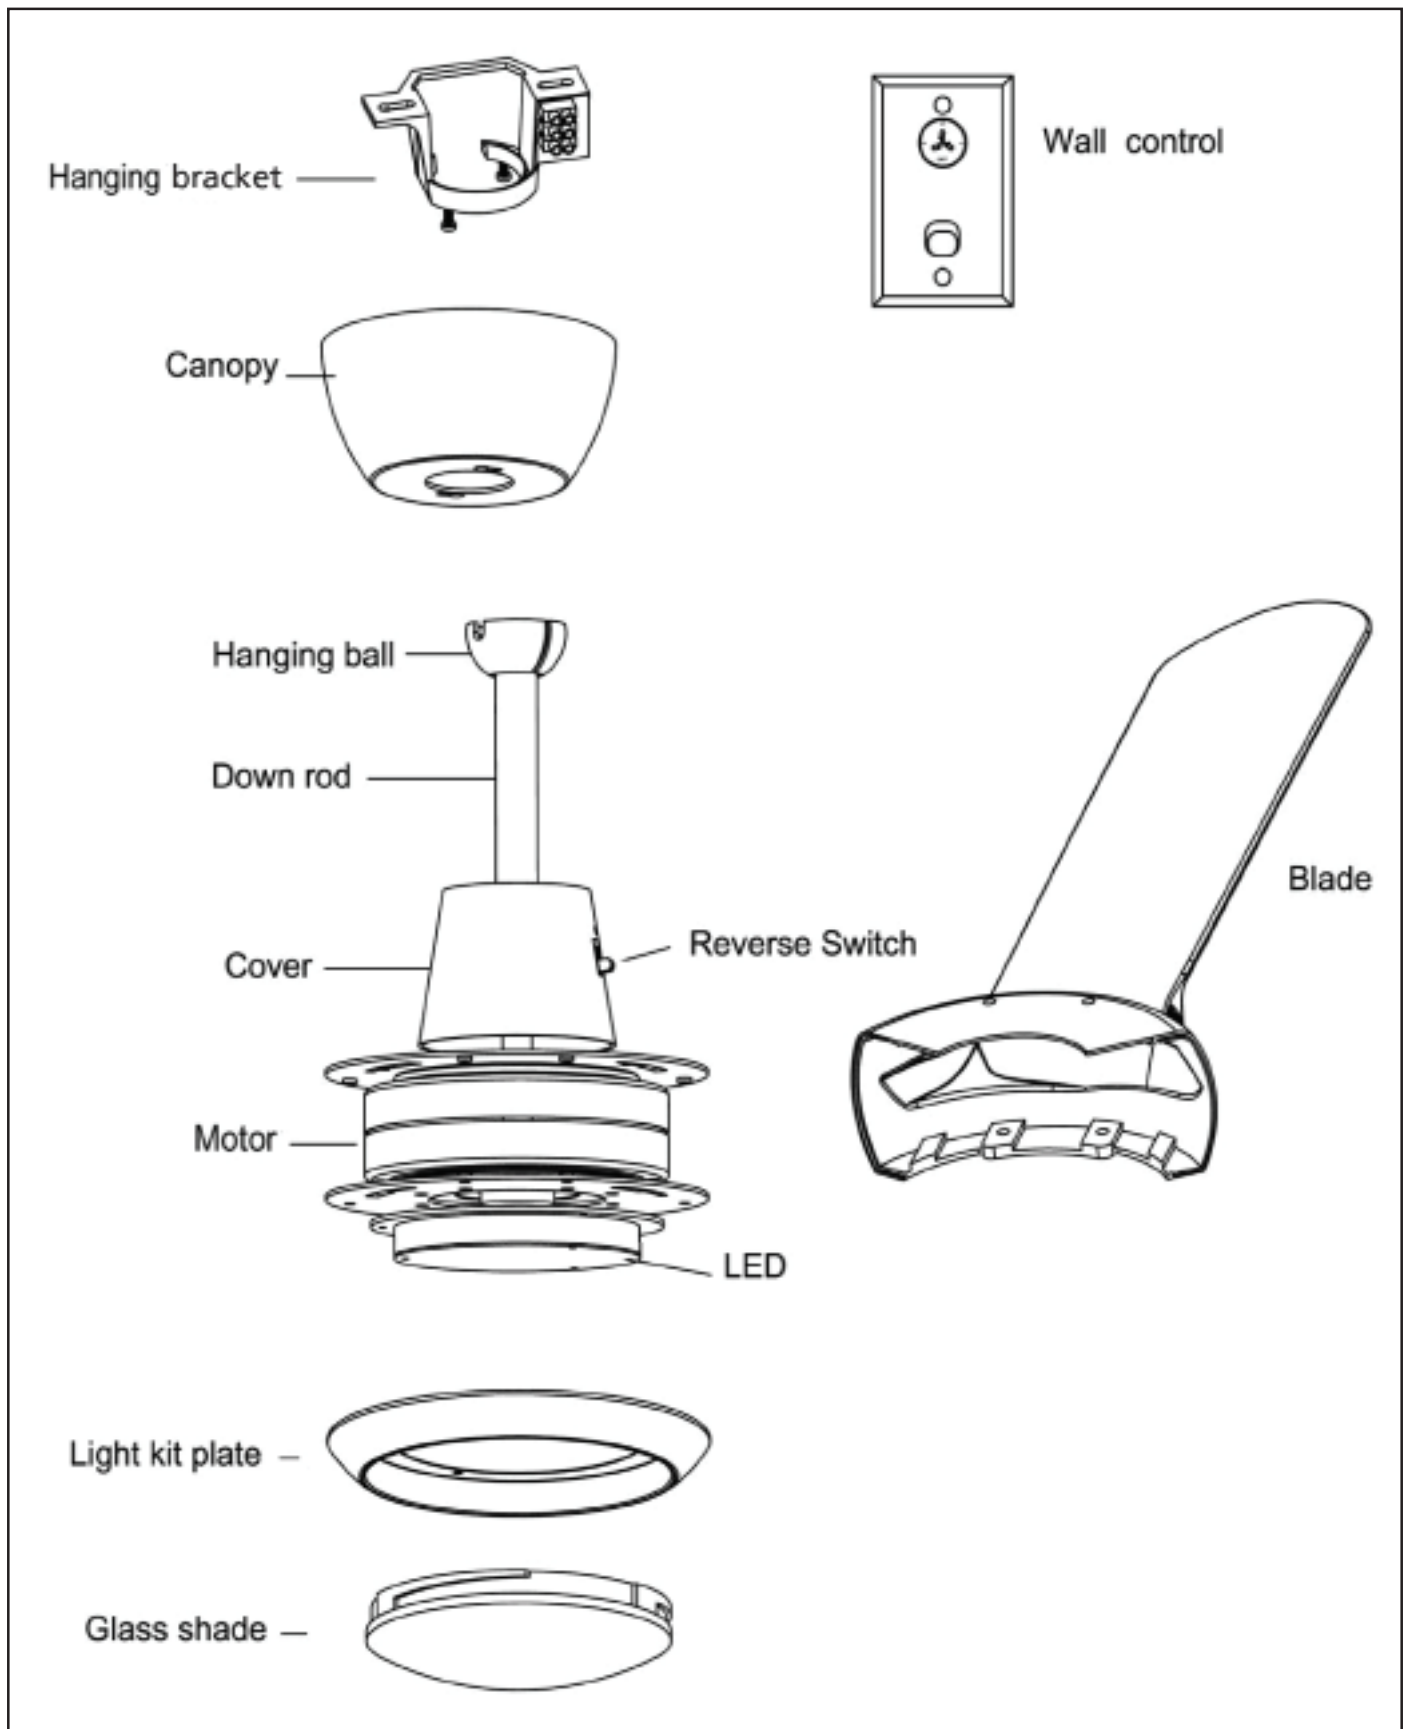

HOW TO ASSEMBLE

Secure the hanger bracket to ceiling beam or a suitable piece of timber inserted between the ceiling beams. Martec Pty Ltd recommends the bracket to be attached with two long screws as supplied within the package. There is a ball seat rubber cover need to be pressed into the bracket.(See Fig.1.) Place circular shockproof gasket above the hanger bracket. Align the bracket and screw the hanger bracket to the ceiling tightly.(See Fig.2.)

Place fan into hanger bracket and align Ball Joint Slot with hanger bracket as illustrated.(See Fig.3.)

After wiring is completed, attach the canopy to the hanger bracket by pushing upwards and twisting anti-clockwise. Locate screws in keyholes and tighten., ensuring canopy is not touching the ball joint. (See Fig.4)

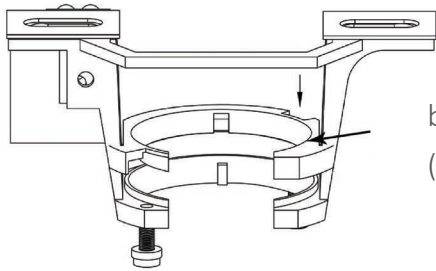


Fig.1

ball seat rubber cover
(Packed with hanger bracket)

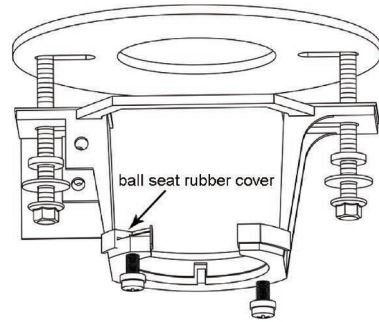


Fig.2

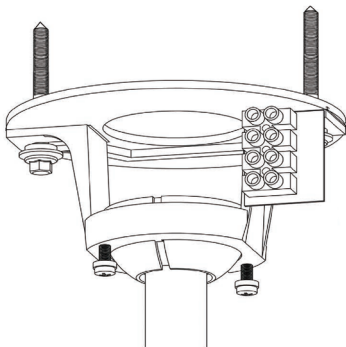


Fig.3

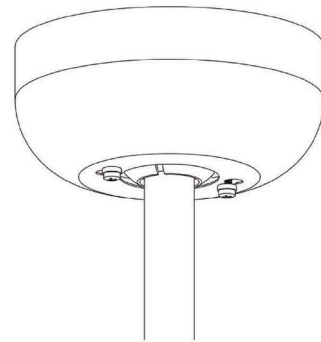


Fig.4

HOW TO ASSEMBLE

Step 1.

Insert blade to the upper motor housing and lower motor housing as shown in Fig. 4a

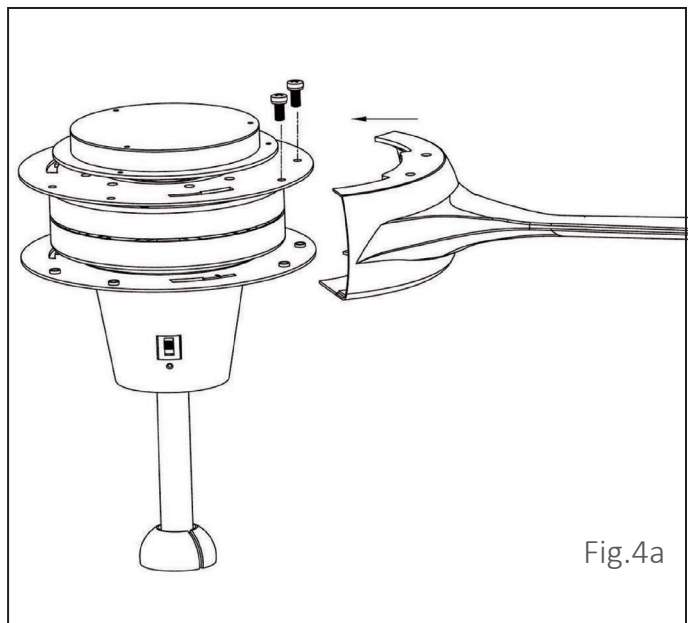


Fig.4a


HOW TO INSTALL BLADES

Step 2.

The blade hole and motor screw hole must be aligned, then lock the blade screw, but do not lock it too tightly.


Repeat this procedure for all blades.

Make sure all these 3 blades are installed in place securely.

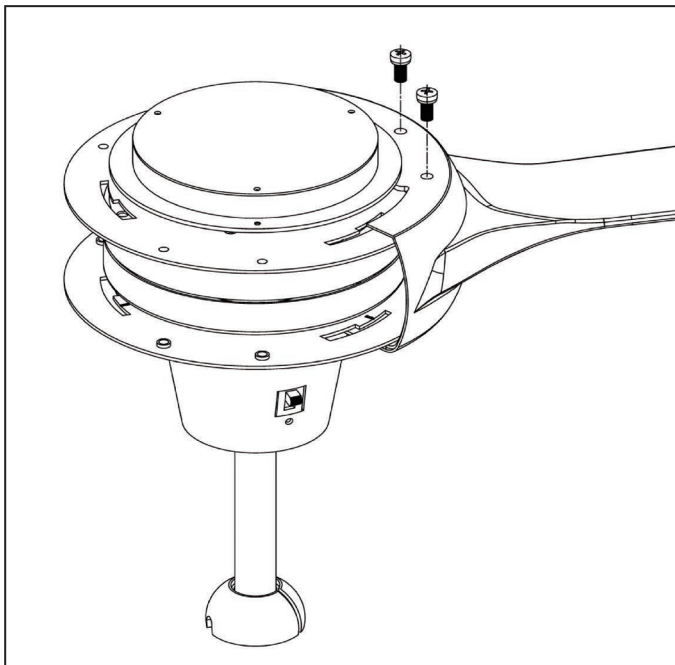


Step 3.

Invert the motor and tighten all the blade screw on this side.

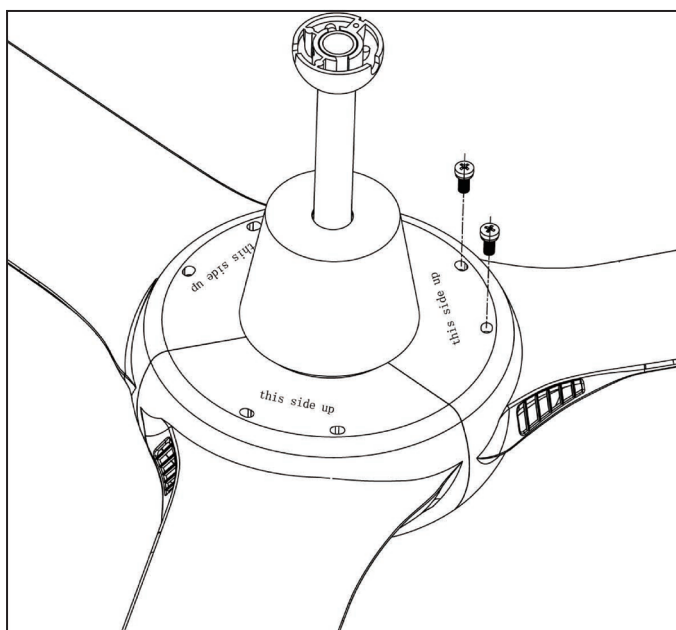


HOW TO INSTALL THE LIGHT KIT PLATE (Version with light)

As shown in the figure below, lock the light kit plate on the light kit plate connector.

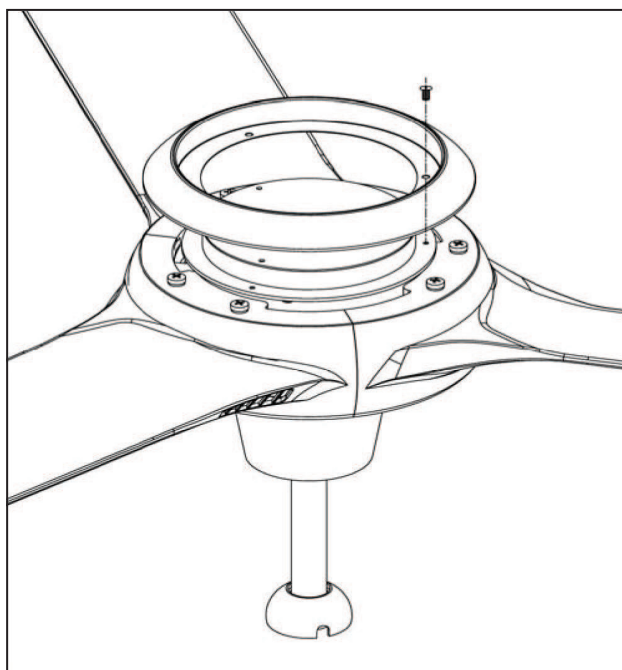

HOW TO INSTALL THE FACE PLATE (Version without light)


Align the position as shown in the figure below. Lower the decoration cover, spin clockwise and click into place.

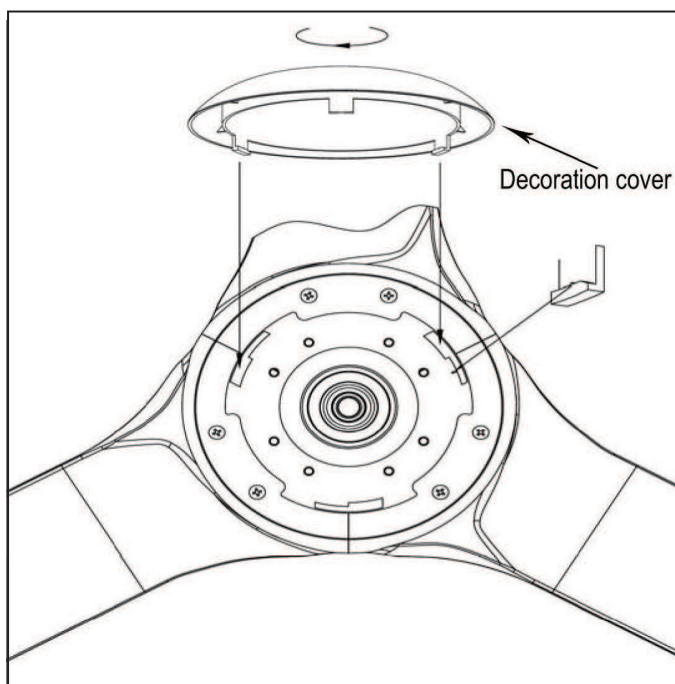

HOW TO INSTALL/REMOVE THE GLASS SHADE (Version with lights)

Align the shade as shown in the figure below, and place the glass shade. Spin it clockwise.

To remove turn the shade anti-clockwise.

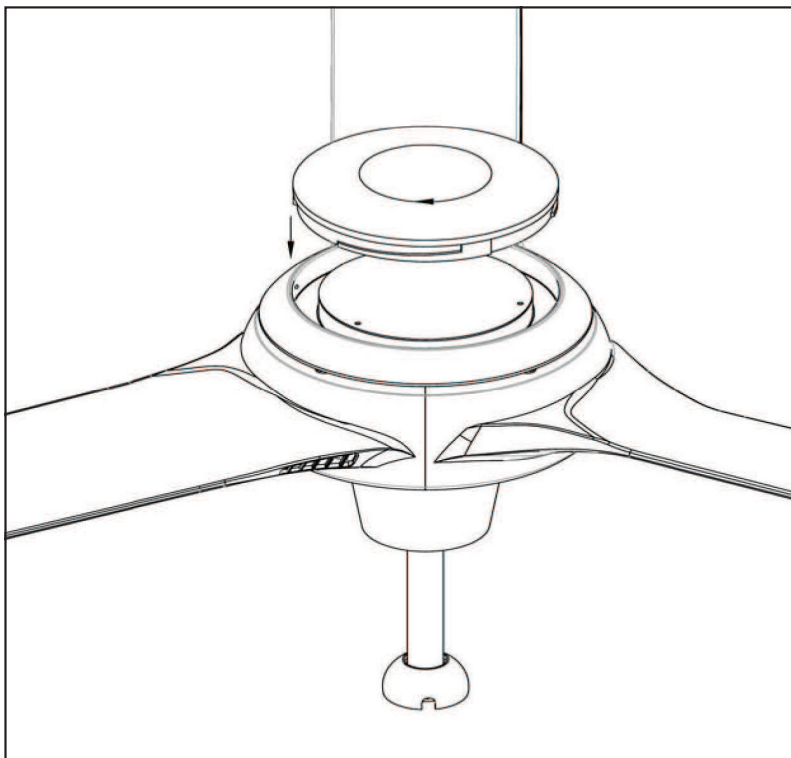

Tricolour CCT (Colour changeable temperature)

Please make sure the light switch is off before changing the colour temperature. Simply flick the switch on the LED plate (See Fig.5.) to select the desired colour temperature (3000K, 4000K or 5000K).



Fig.5

Dimming

The Cruise fan has a smart 3 step dimming LED light module which doesn't require a dimmable remote control or a wall dimmer. It only requires a normal on/off remote kit (MPREM) or a normal light wall switch (supplied as part of the wall controller in the box). Turn the switch on and the light will turn on. Flick the switch on/off within 1 second and the light output will dim down to approx. 50%, flick the switch on/off again and the light output will dim down to approximately 15%. The light kit has no memory function, it will turn on at 100% initially.

